


BugDorm-2400 Insect Tent (BD2400)

MegaView Science Co., Ltd.

<http://BugDorm.com> • <http://MegaView.com.tw>

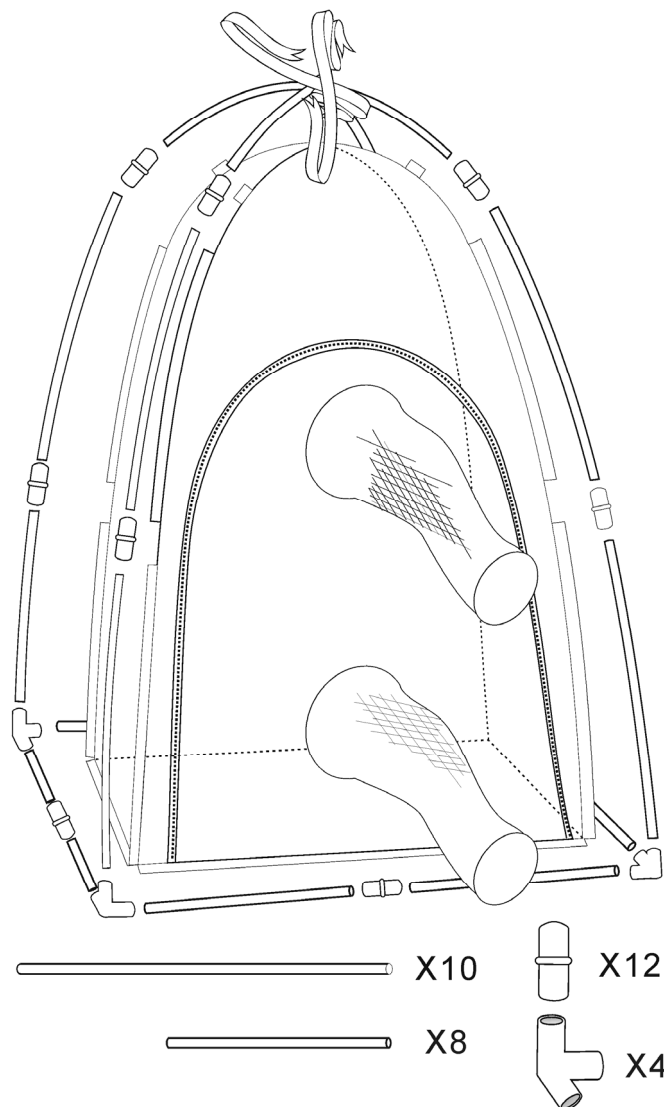

Package Contents

- 1 BugDorm
- 12 Two-Way Splints
- 4 Three-Way Splints
- 8 Short Poles
- 10 Long Poles

Assembly

1. Connect two short poles with one two-way splint to form each side of base.
2. Thread one assembled pole from Step 1 into each of four sleeves on base of BugDorm.
3. Use three-way splints to complete base frame.
4. Thread one long pole through each of BugDorm's four lower sleeves and into top of each three-way splint used in Step 3.
5. Push a two-way splint into top of each pole used in Step 4.
6. Thread one long pole through each of BugDorm's four upper sleeves and into top half of each two-way splint used in Step 5.
7. Push a two-way splint into top of each pole used in Step 6.
8. Thread remaining two poles through tabs on top of BugDorm to form an X and into top half of each two-way splint used in Step 7.
9. Tie ribbons around crossed poles of Step 8.

Caution

- ※ Operating Temperature: -10 to 60°C
- ※ When trying to take the assembled tent apart, you may find a few poles locked in the splint. **Do not force them apart**, or you may rip the seam. Try to find a looser connection elsewhere.

Have any questions? Please email us: bugdorms@megaview.com.tw